



# TSS Associates, Inc.



For further assistance, please contact  
Ecobee directly for Tech Support


---

1-877-932-6233

ecobee 3 Lite

TWO-STAGE  
GAS/OIL  
FURNACE

M15  
M18  
M20

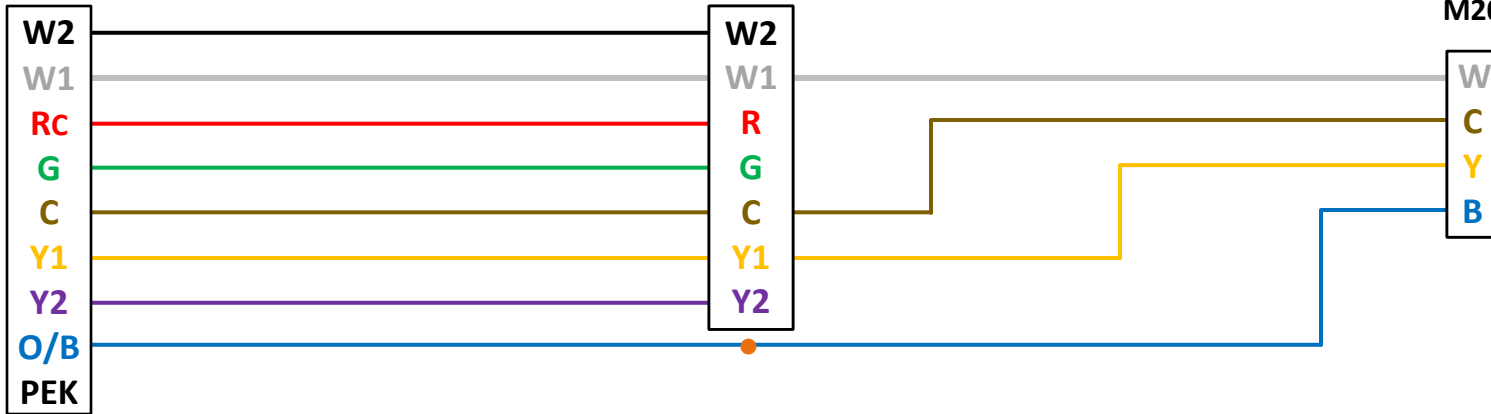

Do NOT Jumper RC and RH

NOTES:

PEK = Power Extender Kit = if there is no Common wire

TSS Associates, Inc.

DESCRIPTION  
ECOBEE 3 LITE – BOSCH IDS – 2-STAGE GAS/OIL FURNACE

DATE: 1/2/2024 PAGE: 2 of 3

**PARAMETERS:**

- >> Transformer > **YES, ONLY Rc IS CONNECTED**
- >> Configuration > Make sure highlighted icons correspond with wires installed
- >> Equipment > **HEAT PUMP > AIR TO AIR**
- >> O/B Reversing Valve > **ON HEAT**
- >> Allow Heat Pump and Aux Heat to run simultaneously > **DISABLE**
- >> Compressor Minimum Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON HOMEOWNER COMFORT AND ENERGY COSTS**
  
- >> Type of heating > **FURNACE**
- >> How do you want your fan to be controlled > **BY THERMOSTAT**

↳ **MAIN MENU > SETTINGS > INSTALLATION SETTINGS (ADVANCED OPTIONS) > THRESHOLDS:**

- >> Threshold Staging > **MANUAL**
- >> Auto Heat/Cool > **DISABLE**
- >> Compressor Minimum Cycle Off Time > **300 SEC**
- >> Compressor Stage 2 Temperature Delta > **AUTO**
- >> Compressor Stage 2 Minimum Runtime > **30 MINUTES**
- >> Compressor Reverse Staging > **DISABLE**
- >> Aux Heat Max Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED**
- >> Compressor to Aux Temperature Delta [droop] > **AUTO**
- >> Compressor to Aux Runtime > **30 MINUTES**
- >> Aux Stage 2 Temperature Delta > **AUTO**
- >> Aux Stage 2 Minimum Runtime > **15 MINUTES**
- >> Aux Reverse Staging > **DISABLE**

NOTES:

**TSS Associates, Inc.**

DESCRIPTION

ECOBEE 3 LITE – BOSCH **IDS** – 2-STAGE GAS/OIL FURNACE

DATE: 10/31/2023

PAGE: 3 of 3