



# TSS Associates, Inc.



For further assistance, please contact  
Ecobee directly for Tech Support


---

1-877-932-6233

ecobee  
Smart Premium

TWO-STAGE  
GAS/OIL  
FURNACE

M15  
M18  
M20

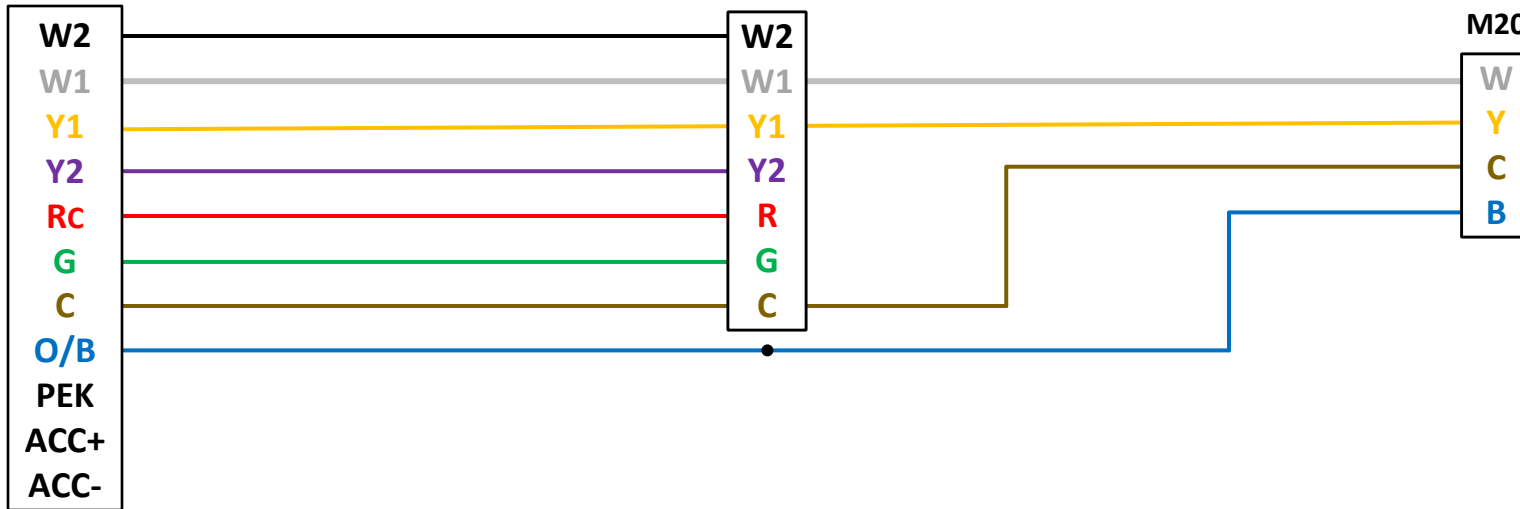

DO NOT JUMPER **RC** and **RH**

NOTES:

**ACC+/-** = Accessory: Dehumidifier, humidifier, ventilators, HRV, or ERV

**PEK** = Power Extender Kit = if there is no Common wire

TSS Associates, Inc.

DESCRIPTION

ECOBEE SMART – BOSCH **IDS** – TWO-STAGE FURNACE

DATE: 1/2/2024

PAGE: 2 of 3

**PARAMETERS:**

- >> Transformer > **YES, ONLY Rc IS CONNECTED**
- >> Configuration > Make sure highlighted icons correspond with wires installed
- >> Equipment > **HEAT PUMP > AIR TO AIR**
- >> O/B Reversing Valve > **ON HEAT**
- >> Allow Heat Pump and Aux Heat to run simultaneously > **DISABLE**
- >> Compressor Minimum Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON ENERGY COSTS AND HOMEOWNER COMFORT**
  
- >> Type of heating > **FURNACE**
- >> How do you want your fan to be controlled > **BY THERMOSTAT**

↳ **MAIN MENU > SETTINGS > INSTALLATION SETTINGS (ADVANCED OPTIONS) > THRESHOLDS:**

- >> Threshold Staging > **MANUAL**
- >> Auto Heat/Cool > **DISABLE**
- >> Compressor Minimum Cycle Off Time > **300 SEC**
- >> Compressor Stage 2 Temperature Delta > **1°F**
- >> Compressor Reverse Staging > **DISABLE**
- >> Aux Heat Max Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON ENERGY COSTS**
- >> Compressor to Aux Temperature Delta [droop] > **2°F**
- >> Compressor to Aux Runtime > **AUTO**
- >> Aux Stage 2 Temperature Delta > **1°F**
- >> Aux Reverse Staging > **DISABLE**

NOTES:

**TSS Associates, Inc.**

DESCRIPTION  
ECOBEE SMART – BOSCH **IDS** – TWO-STAGE FURNACE

DATE: 11/20/2023 PAGE: 3 of 3