




TSS Associates, Inc.



For further assistance, please contact
Ecobee directly for Tech Support

1-877-932-6233

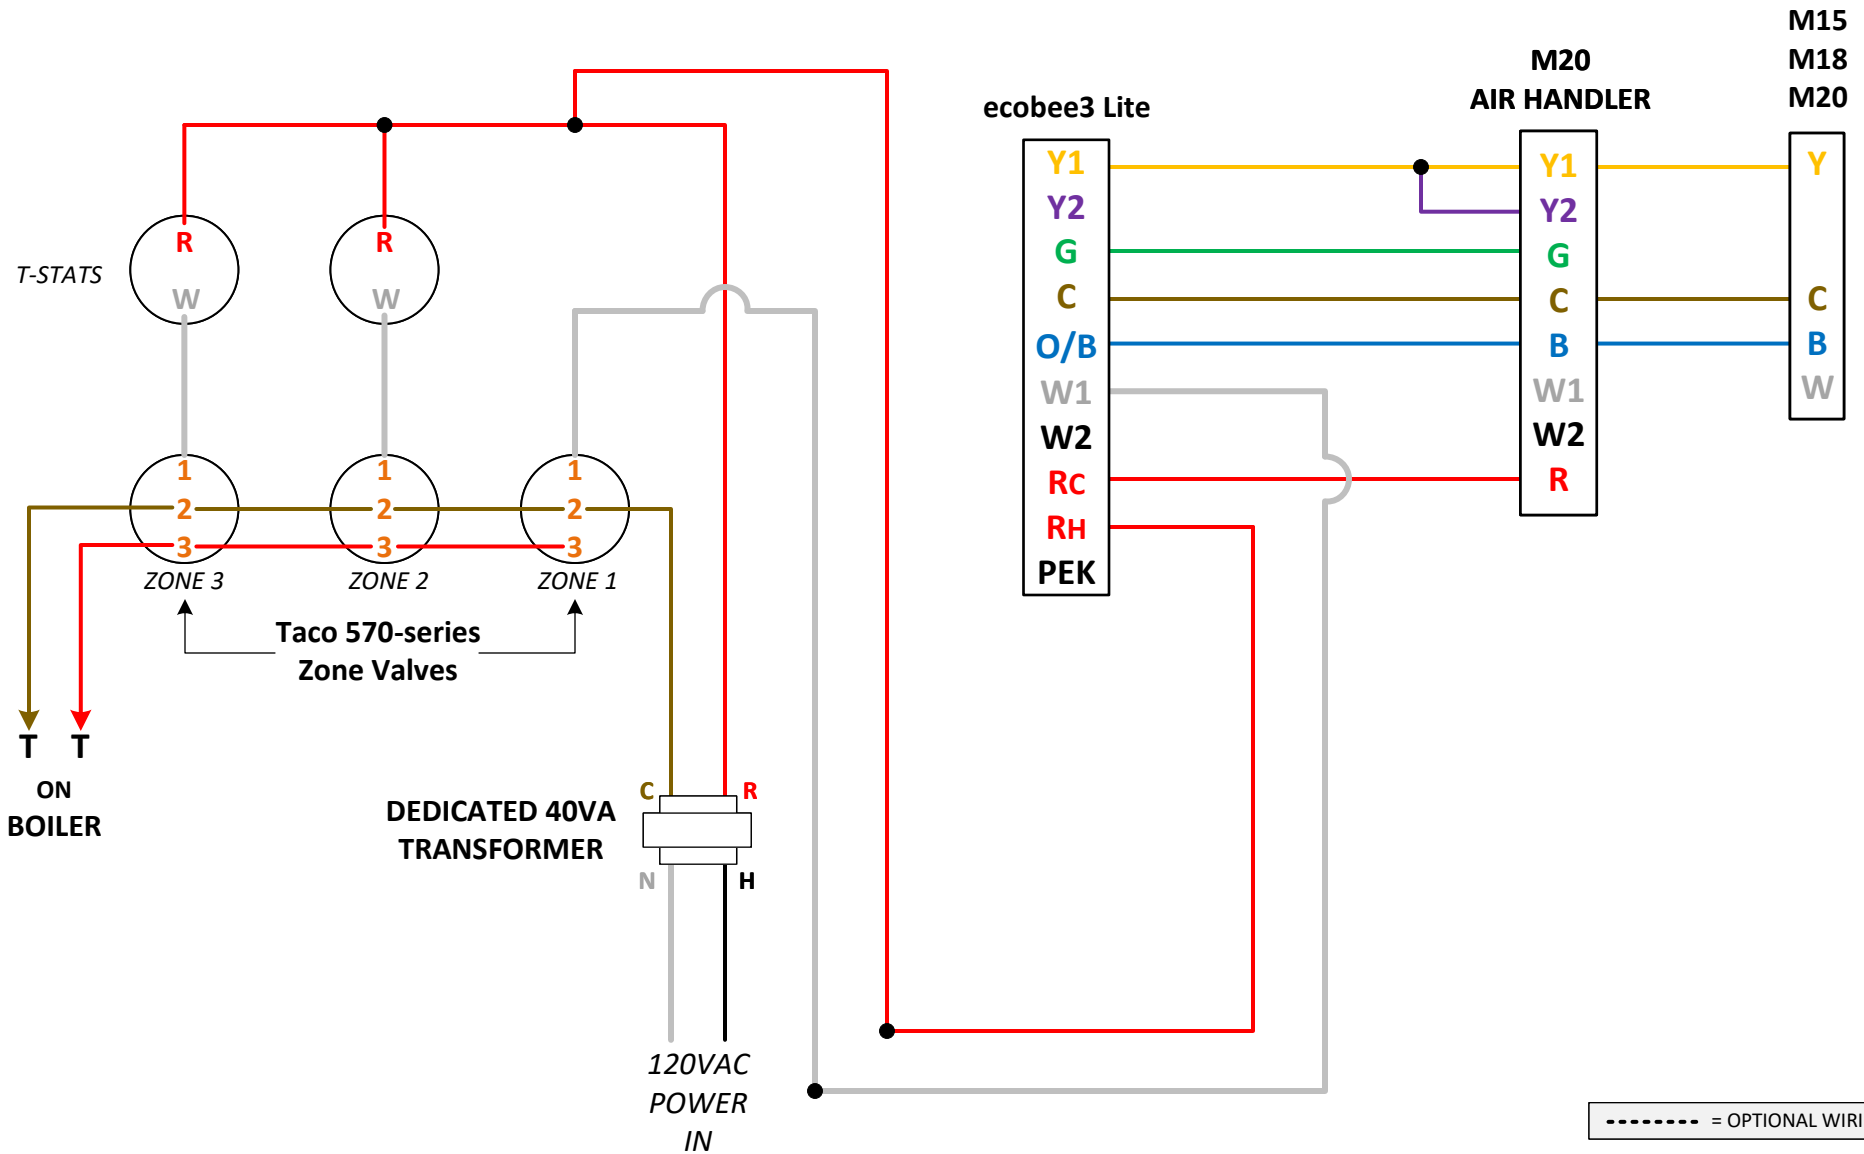

..... = OPTIONAL WIRING

NOTES:
Wiring for system zoned with Taco 570 zone valves.

TSS Associates, Inc.

DESCRIPTION
ECOBEE 3 LITE – BOSCH IDS – BOILER BACK-UP HEAT

DATE: 1/2/2024

PAGE: 2 of 3

PARAMETERS:

- >> Transformer > **NO, BOTH Rc AND Rh ARE CONNECTED**
- >> Configuration > Make sure highlighted icons correspond with wires installed
- >> Equipment > **HEAT PUMP > AIR TO AIR**
- >> O/B Reversing Valve > **ON HEAT**
- >> Allow Heat Pump and Aux Heat to run simultaneously > **ENABLE**
- >> Compressor Minimum Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON HOMEOWNER COMFORT AND ENERGY COSTS**

- >> Type of heating > **BOILER**
- >> How do you want your fan to be controlled > **BY EQUIPMENT**

↳ **MAIN MENU > SETTINGS > INSTALLATION SETTINGS (ADVANCED OPTIONS) > THRESHOLDS:**

- >> Threshold Staging > **MANUAL**
- >> Auto Heat/Cool > **DISABLE**
- >> Aux Heat Max Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON ENERGY COSTS**
- >> Compressor to Aux Temperature Delta [droop] > **2°F**
- >> Compressor to Aux Runtime > **AUTO**

NOTES:

TSS Associates, Inc.

DESCRIPTION

ECOBEE 3 LITE – BOSCH IDS – BOILER BACK-UP HEAT

DATE: 11/1/2023

PAGE: 3 of 3