



# TSS Associates, Inc.



For further assistance, please contact  
Ecobee directly for Tech Support



---

1-877-932-6233

ecobee3 lite



Do NOT Jumper  
Rc and Rh

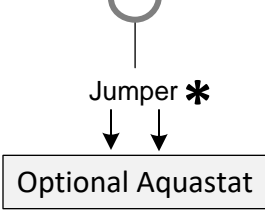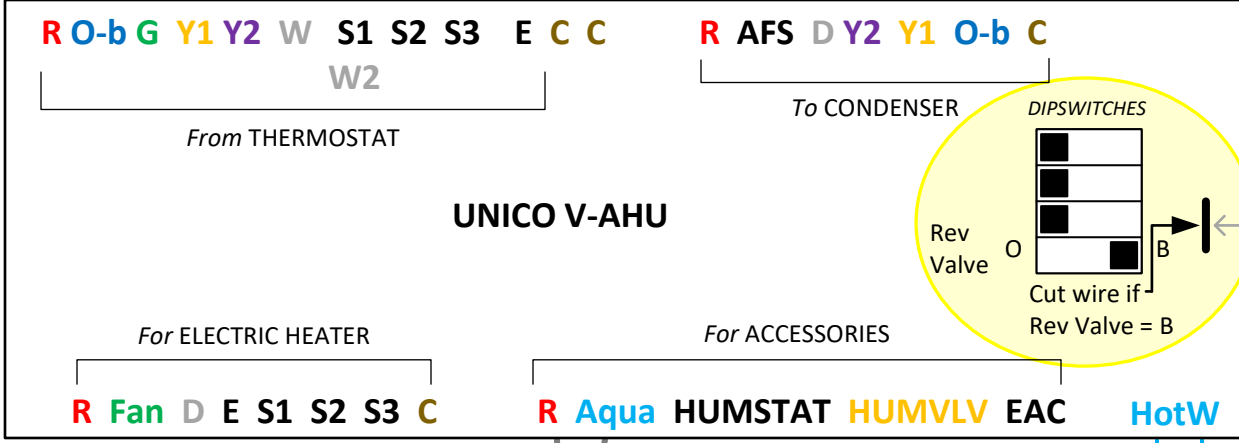

To X-X  
This relay is activated on call on W and is 5amp @ 240VAC. Can also wire to R-W at a Zone Relay Control or T-T directly at Boiler

----- = OPTIONAL WIRING

NOTES:  
 \* = (1) **MUST** remove Jumper between R & O-b, and set Reversing Valve to B (cut wire)  
 (2) Remove Jumper between Y1 & Y2 if two-stage cooling is desired from thermostat  
 (3) Remove Jumper from R & Aqua if an external Aquastat is installed and is desired to supplement control of HotW temperature  
 PEK = Power Extender Kit = if there is no Common wire

**TSS Associates, Inc.**

DESCRIPTION ECOBEE 3 LITE – BOSCH IDS – UNICO AIR HANDLER	
DATE: 1/2/2024	PAGE: 2 of 3

**PARAMETERS:**

- >> Transformer > **YES, ONLY Rc IS CONNECTED**
- >> Configuration > Make sure highlighted icons correspond with wires installed
- >> Equipment > **HEAT PUMP > AIR TO AIR**
- >> O/B Reversing Valve > **ON HEAT**
- >> Allow Heat Pump and Aux Heat to run simultaneously > **ENABLE**
- >> Compressor Minimum Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED BASED UPON HOMEOWNER COMFORT AND ENERGY COSTS**
  
- >> Type of heating > **FURNACE**
- >> How do you want your fan to be controlled > **BY THERMOSTAT**

↳ **MAIN MENU > SETTINGS > INSTALLATION SETTINGS (ADVANCED OPTIONS) > THRESHOLDS:**

- >> Threshold Staging > **MANUAL**
- >> Auto Heat/Cool > **OFF**
- >> Compressor Minimum Cycle Off Time > **300 SEC**
- >> Compressor Stage 2 Temperature Delta > **AUTO**
- >> Compressor Stage 2 Runtime > **30 MIN**
- >> Compressor Reverse Staging > **DISABLE**
- >> Aux Heat Max Outdoor Temperature > **WHATEVER TEMPERATURE IS DESIRED**
- >> Compressor to Aux Temperature Delta [droop] > **AUTO**
- >> Compressor to Aux Runtime > **60 MIN** (*SET TO 30 MIN IF USING TWO STAGES*)
- >> Aux Stage 2 Temperature Delta > **AUTO**
- >> Aux Stage 2 Runtime > **30 MIN**
- >> Aux Reverse Staging > **DISABLE**

} **IF USING Y1-Y2**

} **IF USING W1-W2**

NOTES:

**TSS Associates, Inc.**

DESCRIPTION  
ECOBEE 3 LITE – BOSCH **IDS** – UNICO AIR HANDLER

DATE: 1/2/2024

PAGE: 3 of 3