




TSS Associates, Inc.

Honeywell

For further assistance, please contact
Honeywell directly for Tech Support

1-800-633-3991

© Copyright 2023 TSS Associates, Inc. All Rights Reserved. No part of this document may be modified or reproduced without consent from TSS Associates, Inc. This document is for informational purposes only. For additional assistance, please contact Tech Support.

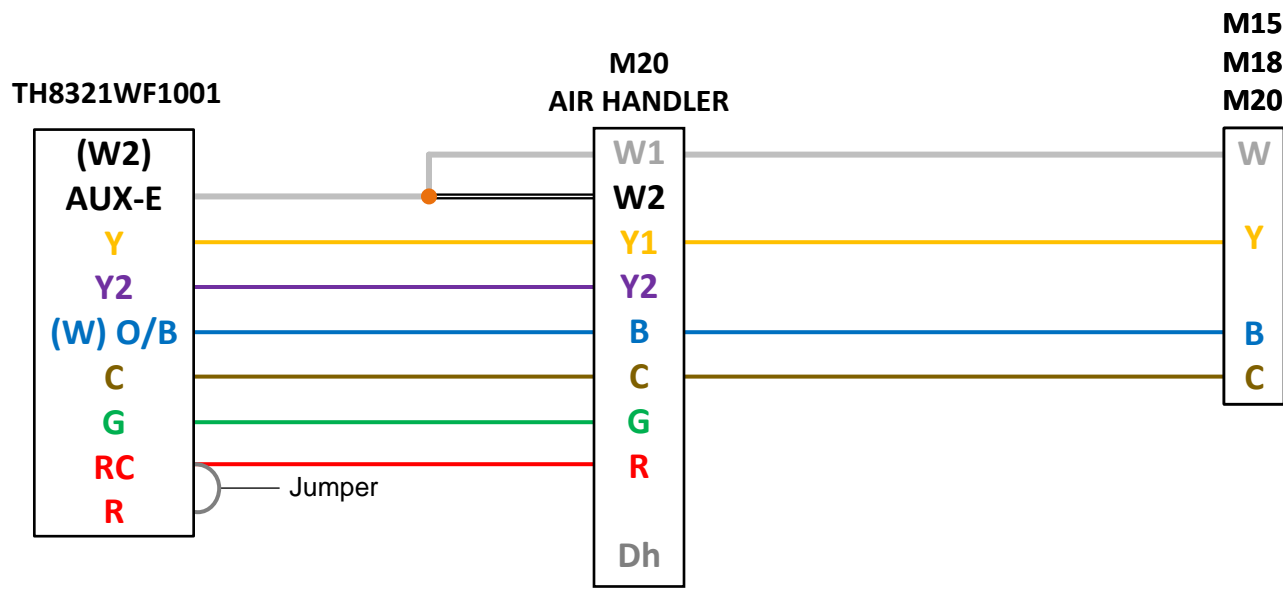

NOTES:
Some form of auxiliary heat, such as electric strip heaters, is highly recommended to be installed.

TSS Associates, Inc.

DESCRIPTION
HONEYWELL VISIONPRO 8000 – BOSCH IDS & M20 AHU – ELECTRIC

PARAMETERS:

- 106 - Outdoor Temp - Set to **Wired/Internet**, *for wired see below:*
 - 200 - Heating System - Set to **Heat Pump**
 - 201 - Heat Equipment - Set to **Air-to-Air Heat Pump**
 - 206 - Reversing Valve (O/B terminal) - Set to **O/B on Heat**
 - 207 - Cool/Compressor Stages - Set to **2**
 - 212 - Backup Heat Type - Set to **Electric** (*this allows both heat pump and electric strip to run simultaneously if needed*)
 - 213 - Backup Heat Stages - Set to **1**
 - 216 - Backup Heat Fan - Set to **Equip Controls Fan**
 - 219 - External Fossil Fuel Kit - Set to **No**
 - 300 - System Changeover - Set to **Manual**
 - 301 - Control Options - Set to **Advanced Options**
 - 308 - Backup Heat Droop - Set to **3°F**
 - 311 - Upstage Timer for Backup Heat - Set to **Off**
 - 312 - Outdoor Lockout Heat Pump (Balance Point) - Set to **Whatever temperature is desired based upon homeowner comfort and energy costs**
 - 312 - Outdoor Lockout Backup Heat - Set to **Whatever temperature is desired based upon energy costs**
 - 314 - Cool Cycles Per Hour Stage 1 - Set to **1**
 - 314 - Cool Cycles Per Hour Stage 2 - Set to **1**
 - 316 - Backup Heat Cycles Per Hour - Set to **1**
 - 324 - Compressor Off Time - Set to **Off**
 - 409 - Adaptive Intelligent Recovery - Set to **Yes**
- If using wired outdoor sensor:*
- 340 - Remote sensor - Set to **2 = Outdoor sensor for control**
 - 500 - Wired Outdoor Sensor - Set to **Yes**

All other setpoints should be left to Factory Settings unless any optional equipment has been added to system or based upon customer preference

NOTES:

Some form of auxiliary heat, such as electric strip heaters, is highly recommended to be installed.


TSS Associates, Inc.

DESCRIPTION


HONEYWELL VISIONPRO 8000 – BOSCH IDS & M20 AHU – ELECTRIC

DATE: 1/8/2024

PAGE: 3 of 4

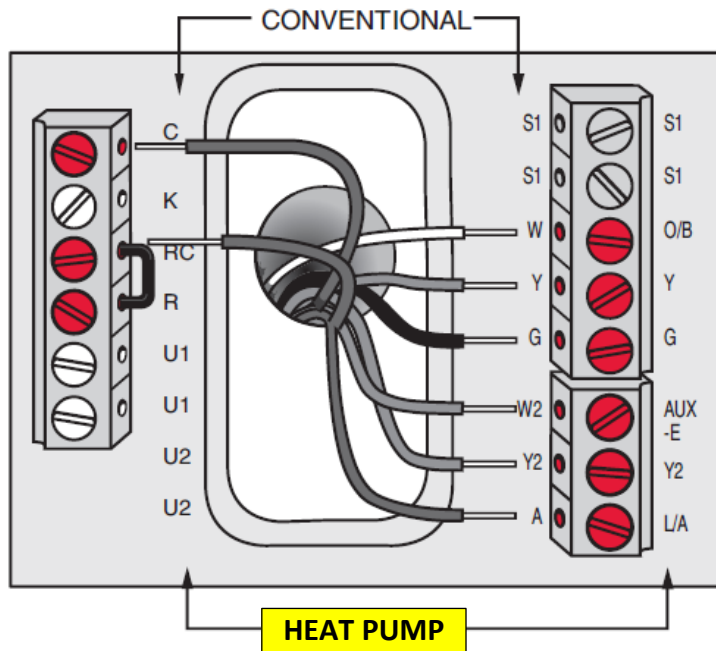

Thermostat (back view)

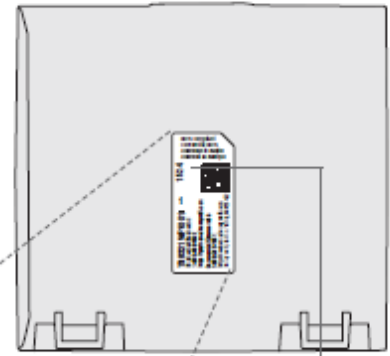

Password (Date Code)



Terminal Designations

Conventional System		Heat Pump	
Terminal	Description	Terminal	Description
C	Common wire from secondary side of cooling transformer (if 2 transformers).	C	Common wire from secondary side of cooling transformer.
Rc*	Cooling power.	Rc	Cooling power.
R*	Heating power.	R	Heating power.
W	Heat Stage 1	O/B	Changeover valve for heat pumps.
W2	Heat Stage 2	AUX-E	Backup Heat/Emergency Heat
Y	Compressor Stage 1	Y	Compressor Stage 1
Y2	Compressor Stage 2	Y2	Compressor Stage 2
G	Fan Relay	G	Fan Relay
A	Connect to Economizer Module or Lighting Panel (TOD).	L/A	Connect to Compressor Monitor, Zone Panel, Economizer Module or Lighting Panel (TOD).
U1 / U1	Universal relay for humidification, dehumidification, ventilation, or a stage of heating/cooling.	U1 / U1	Universal relay for humidification, dehumidification, ventilation, or a stage of heating/cooling.
S1 / S1	Universal input for a wired indoor, outdoor or discharge sensor.	S1 / S1	Universal input for a wired indoor, outdoor or discharge sensor.
K**	Connect to K on Wire Saver module.	K**	Connect to K on Wire Saver module.

* Remove factory installed jumper for two transformer systems.

** The THP9045A1023 Wire Saver module is used on heat/cool systems when you only have four wires at the thermostat and you need a fifth wire for a common wire. Use the **K** terminal in place of the Y and G terminals on conventional or heat pump systems to provide control of the fan and the compressor through a single wire—the unused wire then becomes your common wire. See THP9045 instructions for more information.

NOTES:

Some form of auxiliary heat, such as electric strip heaters, is highly recommended to be installed.

TSS Associates, Inc.

DESCRIPTION

HONEYWELL VISIONPRO 8000 – BOSCH IDS & M20 AHU – ELECTRIC

DATE: 1/8/2024

PAGE: 4 of 4